



Batterie 9 pcs + 24 couverts

Dim.(cm)	Hauteur(cm)	Cap.(L)	Article
---	---	---	63D122DG0497



Casserole

Dim.(cm)	Hauteur(cm)	Cap.(L)	Article
Ø16	8.1	1.5	63D122DG1116
Ø20	9.1	2.6	63D122DG1120

Couvercle en verre



Diam.(cm)	Hauteur(cm)	Cap.(L)	Article
Ø14	1.2	---	634000DG8114
Ø16	1.2	---	634000DG8116
Ø18	1.1	---	634000DG8118
Ø20	1.2	---	634000DG8120
Ø22	1.2	---	634000DG8122
Ø24	1.2	---	634000DG8124
Ø26	1.2	---	634000DG8126



Ensemble cuit-pâtes bas

Diam.(cm)	Hauteur(cm)	Cap.(L)	Article
Ø20	18	---	63D122DG0201



Faitout

Diam.(cm)	Hauteur(cm)	Cap.(L)	Article
Ø16	8.1	1.5	63D122DG1016
Ø20	9.1	2.6	63D122DG1020
Ø24	10.1	4.2	63D122DG1024



Fondue/pierre à griller

Dim.(cm)	Hauteur(cm)	Cap.(L)	Article
30x22	10.5	---	63D122DG6016



Marmite

Diam.(cm)	Hauteur(cm)	Cap.(L)	Article
Ø16	11.6	2.2	63D122DG6616
Ø20	13.6	4	63D122DG6620
Ø24	15.6	6.7	63D122DG6624



Pot au lait

Diam.(cm)	Hauteur(cm)	Cap.(L)	Article
Ø14	13.1	1.9	63D122DG2214

Sauteuse + couvercle

Diam.(cm)	Hauteur(cm)	Cap.(L)	Article
Ø24	5.6	2.1	63D122DG5024A